

Link do produktu: <https://zamep.pl/uchwyt-stopki-maszyny-do-szycia-singer-lucznik-serii-800-p-35.html>



Uchwyt stopki maszyny do szycia Singer, Łucznik serii 800,

Cena	7,38 PLN
Czas wysyłki	24 godziny
Numer katalogowy	0000000201
Kod EAN	0000000201
Producent	Singer

Opis produktu

Uchwyt Stopki maszyny do szycia Singer pasuje do modeli: Singer KL: 237, 241, 247, 252, 257, 263, 288, 290, 328, 337, 338, 360, 362, 413, 413K, 416, 418, 457, 476, 478, 513, 518, 533, 534, 543, 547, 563, 588, 802, 807, 809, 813, 814, 818, 822, 824, 827, 833, 834, 838, 844, 1021, 1022, 1482, 1485, 1486, 1488, 1490, 1492, 1872, 2001, 2102, 2105, 2106, 2108, 2110, 2112, 2114, 2118, 2210, 2302, 2303, 2304, 2315, 2330, 2404, 2440, 2502, 2503, 2504, 2505, 2515, 2517, 2530, 2543, 2732, 3101, 3102, 3103, 3105, 3270, 3314, 3317, 3343, 4325, 4525, 4528, 4530, 4552, 4622, 4830, 5017, 5028, 5040, 5050, 5417C, 5430, 5430C, 5502, 5504, 5505, 5508, 5522, 5524, 5525, 5528, 5705, 5710, 57817, 57820, 57825, 5802, 5805, 5806, 5808, 5810, 5812, 5814, 5816, 5817, 5818, 5820, 5825, 5828, 5830, 5838, 5932, 6100, 6102, 6104, 6105, 6106, 6110, 6120, 6130, 6136, 6146, 6152, 6156, 6174, 6184, 6210, 6211, 6212, 6214, 6215, 6217, 6221, 6233, 6234, 6235, 6305, 6310, 6314, 6318, 6408, 6412, 6416, 6423, 6620, 7028, 7037, 7136, 7146, 7184, 7186, 7211, 7212, 8734, 9005, 9008, 9010, 9022, 9110, 9113, 9117, 9124, 9134, 9323, 9410, 9420, 9423, 9432, 9444, 9850, 9852, 9855, 9858, 6860, 9867, 9876, CG500, CG550, CG590, CM17, DX14, FM17, FM22, HD102, HD105, HD110 & SM14. Łucznik 827Maja,834Basia,2005,2006,2007,2008,2009,2018,2024

Uchwyt Stopki Singer pasuje do maszyn: Singer KL: 1021, 1022, 1280N, 1482, 1485, 1486, 1488, 1490, 1492, 1872, 2102, 2105, 2106, 2108, 2110, 2112, 2114, 2118, 2210, 2302, 2303, 2304, 2315, 2330, 237, 2404, 241, 242, 2440, 247, 2500, 2502, 2503, 2504, 2505, 2515, 2517, 252, 2530, 2543, 257, 263, 2732, 2808, 288, 3100, 3101, 3102, 3103, 3105, 3130, 3140, 3270, 328, 3314, 3317, 3343, 337, 338, 360, 362, 413, 413K, 416, 418, 418K Stylist, 4325, 4525, 4528, 4530, 457, 457K, 4620, 476 Stylist, 476K Stylist, 478, 4830, 4832, 5017, 5028, 5040, 5050, 513, 518, 533, 5417C, 5430, 5430C, 534, 543, 547, 5502, 5504, 5505, 5508, 5522, 5524, 5525, 5528, 5530, 563, 5705, 5710, 57817, 57820, 57825, 5802, 5805, 5806, 5808, 5810, 5812, 5814, 5816, 5817, 5818, 5820, 5825, 5828, 5830, 5838, 588, 6010, 6017, 6100, 6102, 6104, 6105, 6106, 6110, 6112, 6114, 6115, 6116, 6120, 6124, 6125, 6126, 6130, 6136, 6146, 6152, 6156, 6174, 6184, 620E1, 6210, 6211, 6212, 6214, 6215, 6217, 6221, 6305, 6310, 6314, 6318, 6408, 6412, 6416, 6423, 6606, 6620, 6860, 7028, 7100, 7136, 7146, 7184, 7186, 7211, 7212, 802, 807, 809, 813, 814, 818, 822, 824, 827, 833, 834, 838, 844, 8734, 9008, 9010, 9022, 9420, 9423, 9432, 9602, 9605, 9608, 9610, 9614 964, 966, 968, 972, 974, 9810, 9828, 9850, 9852, 9855, 9858, 9867, 9876, CG500, CG550, CG590, CM17, CP17, DX14, FM17, FM22, HD102, HD105, HD110, SM14

Uchwyt Stopki maszyny do szycia pasuje do modeli: Łucznik serii 800

Stopki pasujące do uchwytu:

- [stopka do aplikacji](#)
- [stopka do szycia prostego](#)
- [stopka do wszywania zamków](#)
- [stopka do dziurek na guziki](#)
- [stopka uniwersalna](#)